


Chain Link Fence Gate Self Closing Spring Universal Gate Hinge

Installation

These hinges can be mounted from an inline orientation to an offset orientation. With the inline orientation, the gate will open about 90 degrees. In the offset installation, the gate will open about 180 degrees. The hinges can also be mounted with either end up but the adjustment hex must be adjusted only in the direction shown or early spring failure and improper operation will result.

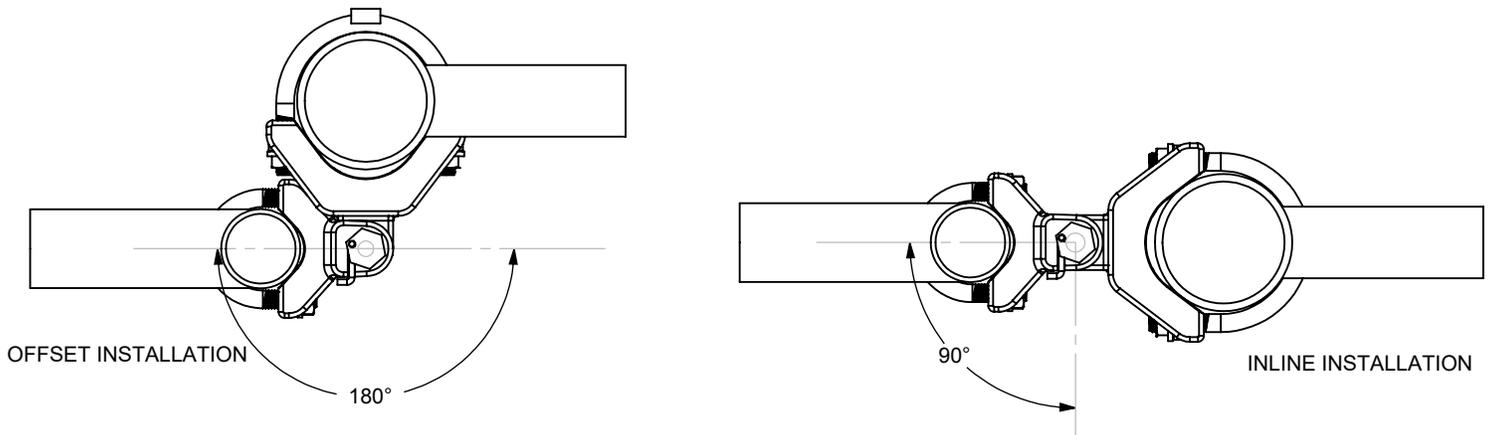


Tension Adjustment

Hold the adjustment hex with a wrench while loosening the set screw with the supplied hex wrench. Turn the adjustment hex to adjust tension, clockwise to increase tension, counter-clockwise to reduce tension. Once desired tension is set, tighten the set screw. Note: The maximum tension adjustment is one full turn.

Optional mounting screws

If desired, the hinges may be screwed to the post as shown. (screws not included)

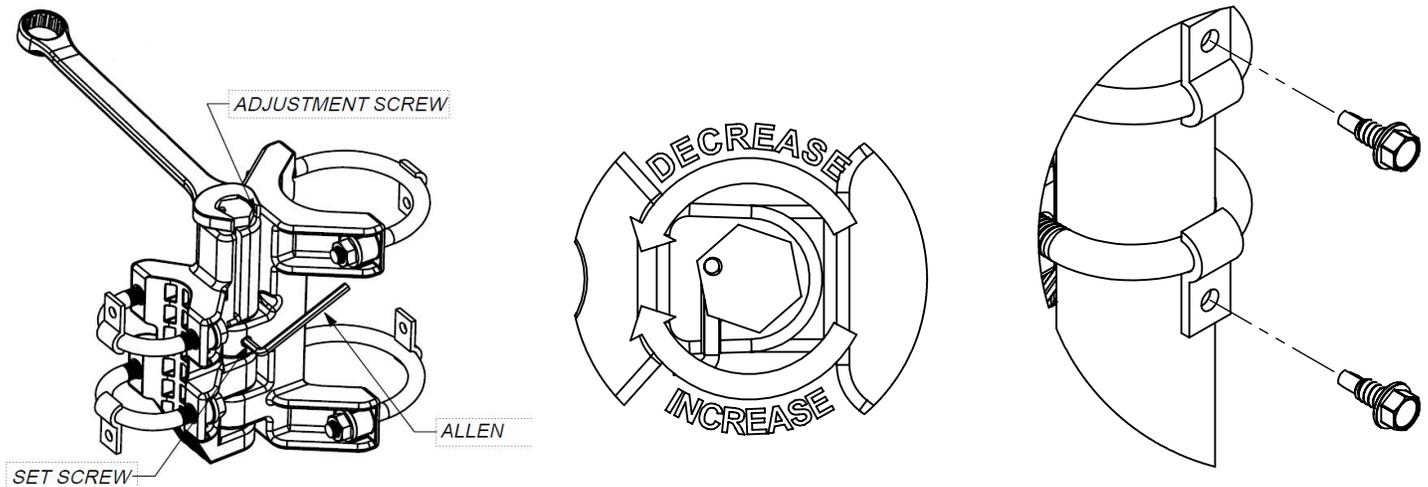

NOTE:

The hinge should be inspected annually, or more frequently if the gate is used often. Spring tension adjustments should be made as needed. The hinge should be regularly lubricated by spraying an oil based lubricant into the barrel.